



# INSTALLATION INSTRUCTIONS

Heater Operational Hours Display - Accumulative

## DIMENSIONS

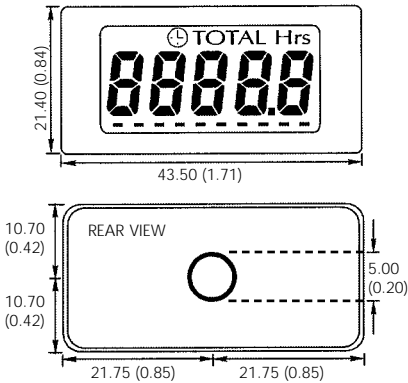

All dimensions in mm (inches)

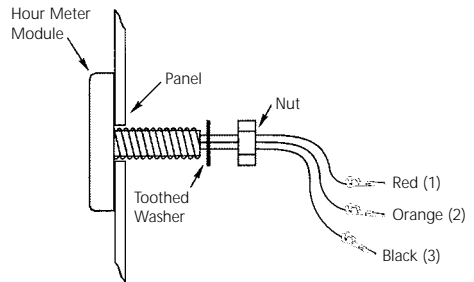

## INSTALLATION

The hour meter is to be installed in Class 8 Truck sleepers next to the Webasto AT 2000 Control Switch/Rheostat.

Drill a 6.35mm (1/4") hole in the panel. Fit the module to the panel by passing its threaded stud and the wires through the hole, fitting the washer and tightening the nut provided. Take care not to trap any of the connecting wires. Do not over-tighten the nut as this may damage the meter.


**DO NOT PULL THE WIRES AND DO NOT ALLOW SCREW TERMINALS OR OTHER WIRES TO HANG FROM THE MODULE'S WIRES, AS THIS MAY DAMAGE THE PRODUCT.**

## WIRING CONNECTIONS


The hour meter is preassembled with terminal pins crimped onto the wires.

Before inserting the terminal pins into the plug housing, ensure the locking tabs have not been bent out of shape during installation of the hour meter. Terminal pins must lock in place when inserted (with an audible click).

- Insert red wire pin into position 1 of the housing.
- Insert orange wire pin into position 2 of the housing.
- Insert black wire pin into position 3 of the housing.
- Plug assembled connector into mating plug of the heater control harness. Wire colors must match as in wiring diagram.

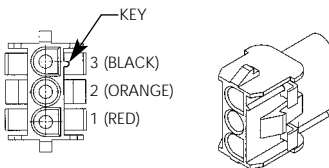

Connector Housing Detail

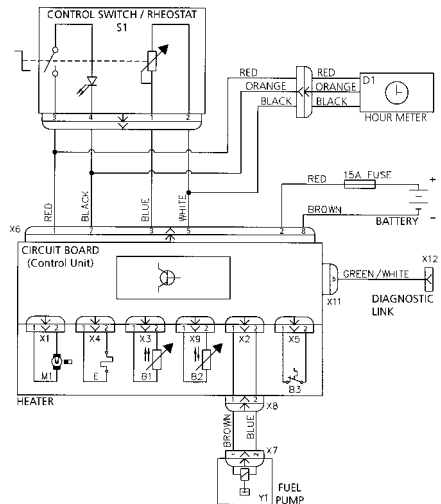

## OPERATIONAL CHARACTERISTICS

The hour meter counts all active hours whenever the Webasto heater control is switched on regardless of operational state (heating or paused). A scrolling LCD bar on the bottom of meter display indicates that the Webasto heater is active (switched on). Scrolling bar disappears when the Webasto heater is inactive (switched off).

The hour meter display remains visible regardless of the heaters operational state (on or off). The hour meter displays hours only. In the event of a power interruption, the accumulated hours of operation displayed will not be lost. Hour meter cannot be reset to zero.

In the event of a heater malfunction, a flash code will be displayed on the LED in the center of the dial of the control switch/rheostat. The hour meter will also display the flash code (except for the first five fast alert flashes) via the center segment of each of the five digits of the display. The flash code continues indefinitely until the control switch/rheostat is switched off. For more information regarding heater malfunctions and flash codes, refer to your installation and operating manual (P/N 907500) under "Troubleshooting."