

Webasto

Feel the drive

Air Top 2000 ST Air Heater



OPERATING INSTRUCTIONS

SWITCH ON

- Rotate heater control knob clockwise ↻ until indicator light illuminates.
- Heater delivers warm air after running 1 to 2 minutes.
- Heater will only start when set temperature is above sleeper temperature.



Heater Control Dial

SET TEMPERATURE


- Rotate heater control knob for temperature adjustments.

↻ = more heat ↻ = less heat

SWITCH OFF

- Rotate heater control counterclockwise ↻ until it clicks and the indicator light turns off.
- Heater runs 2 minutes in cool down mode.

NOTE: Always make sure that air inlet/outlet grilles are not restricted.
See Operating Instructions manual for complete details.

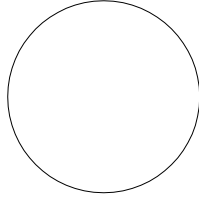

TROUBLESHOOTING

If heater fails to start after 2 start attempts, check the following:

- POWER
 - Operational fuse.
 - Adequate voltage (11V to 13V).
 - Battery connections.
- FUEL
 - Fuel supply (level).
 - Fuel line restrictions.
 - Fuel gelling.
- FLASHING INDICATOR LIGHT/OVERHEAT
 - Air inlet/outlet grille restrictions.

RESET HEATER

- SWITCH IT OFF AND BACK ON AGAIN

MAINTENANCE

To ensure trouble-free operation of your Webasto heater, please observe the following:

- Operate heater for at least 10 minutes once a month. This keeps parts from seizing and lubricates the fuel pump.
- Keep fresh air inlet and outlet free of obstructions to prevent overheating.
- Keep combustion air inlet and exhaust outlet tube free of dirt and obstructions.
- Change fuel filter annually (or more often, if needed).

Webasto Service Hotline: 1-800-555-4518