



04-01-2004

Programming a Spare or Replacement BlueHeat™ Remote Key Fob

Locate the Webasto remote control receiver. You should find it mounted under the vehicle instrument panel. Identify the yellow wire. In most cases, the yellow wire is not connected to any circuits (refer to option 1 for programming). In other cases, the yellow wire may be connected to an ignition source (refer to option 2 for programming). Regardless, the programming procedure is basically the same.

Programming Option 1:

Apply 12 Vdc 5 times within 5 seconds to the yellow wire (item "A" in figure below). Follow by pushing any one of the three buttons on the remote key fob. The receiver is now programmed to accept key fob signals.

Programming Option 2:

If the yellow wire has been connected to an ignition source, turn the key to ignition and off 5 times within 5 seconds followed by pushing any one of the three buttons on the remote key fob.

Or, disconnect the ignition source at the yellow wire connector (item "A" in figure below) and apply 12 Vdc 5 times within 5 seconds to the yellow wire. Follow by pushing any one of the three buttons on the remote key fob. The receiver is now programmed to accept key fob signals. Reconnect the yellow wire when your are done.

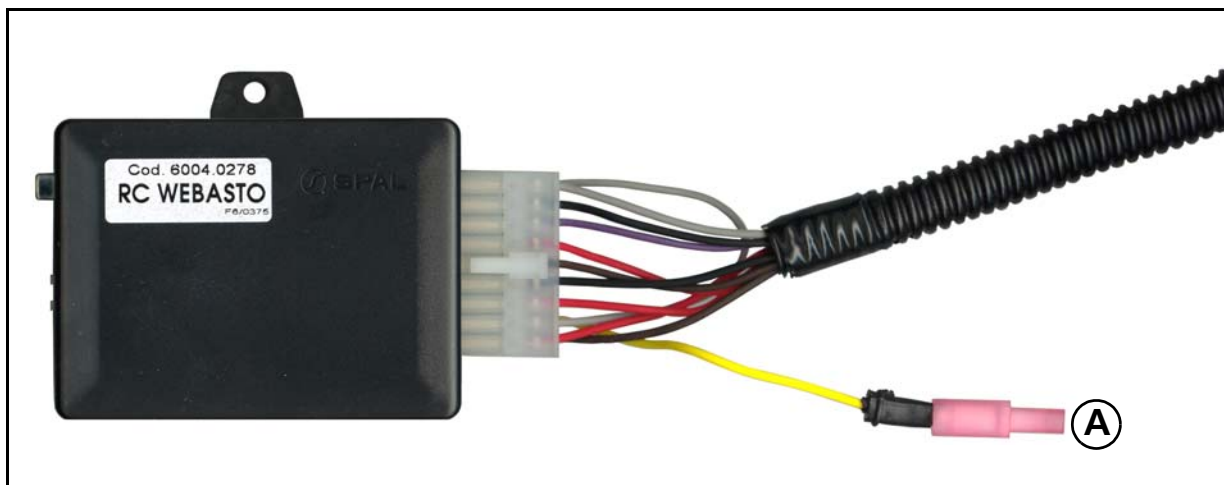


Figure: Webasto Remote Control Receiver