




***Webasto Blue Cool Premium Air Conditioning System, Supplemental
Instructions to change from Air Conditioning to Heating Mode or
Heating Mode to Air Conditioning Mode***

Blue Cool Premium Chiller Control Legend

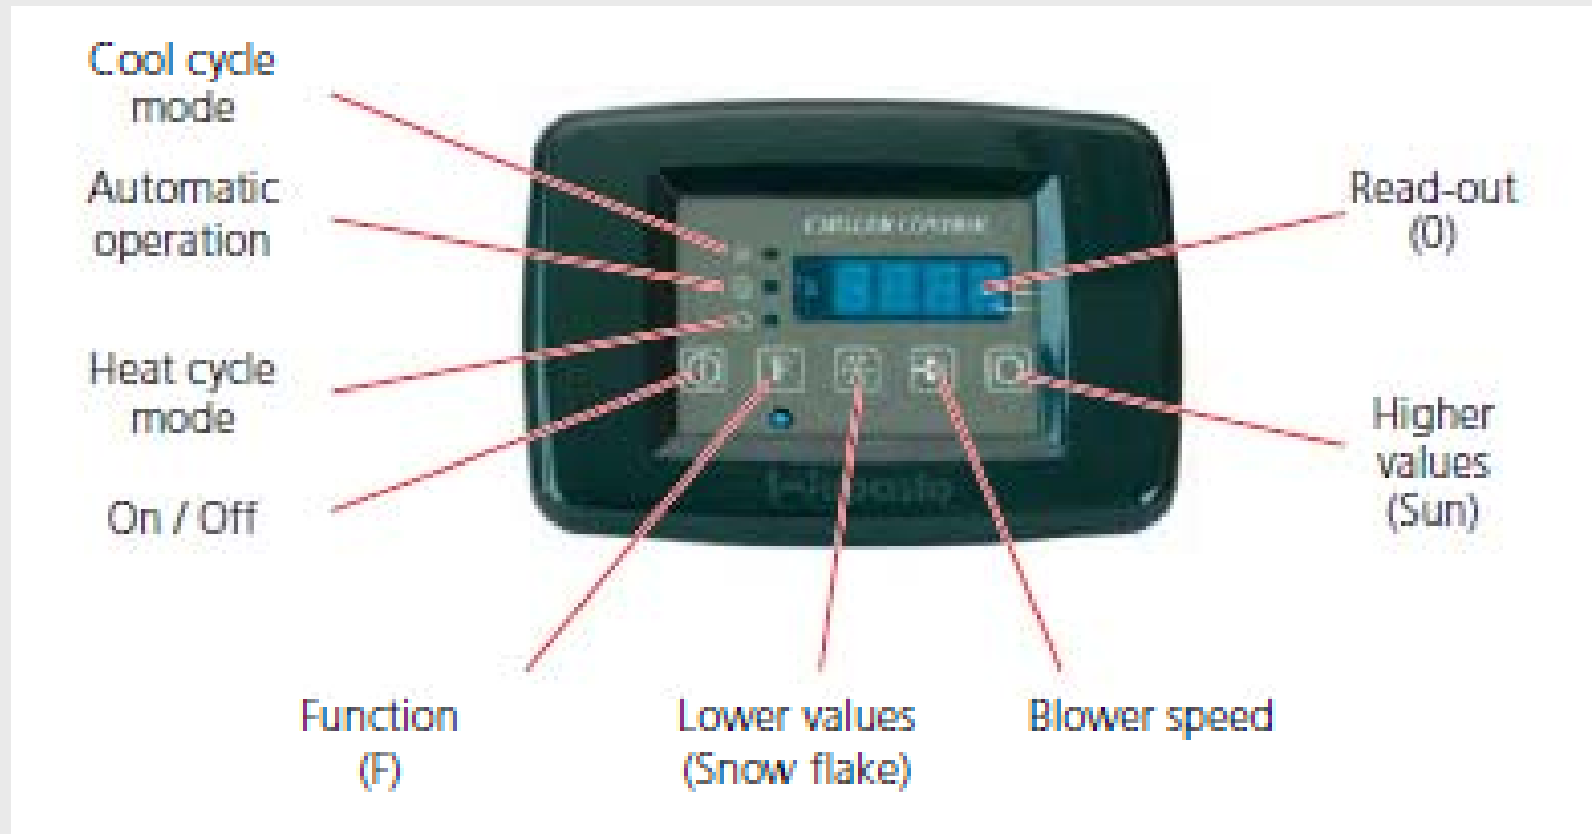

Chiller Control Panel – System in OFF Mode



Chiller Control Panel – Turning the System ON



Chiller Control Panel – System ON Interior Temperature Displayed



Chiller Control Panel – Press FUNCTION (“F”) Key



BA11 indicates that the blower is in automatic mode but not running because the chilled water temperature and set point are not close enough to allow blower operation – this is displayed after pushing the “F” key 1 time with the system turned ON

Chiller Control Panel – Press FUNCTION Key



“H” with numbers behind indicates the temperature of the chilled water circuit, this is displayed after pushing the “F” key 2 times with the system turned ON

Chiller Control Panel – Press FUNCTION Key
– No security code set



“F” with numbers behind indicates the mode of operation that the system is in, (F01 – A/C only; F02 – Heat in reverse cycle only; F03 – Auto A/C or Heat) this is displayed after pushing the “F” key 3 times with the system turned ON and no security code set in the system

Chiller Control Panel – Press FUNCTION Key
- Security code set



“CODE” indicates that the system has been locked to prevent unintended changes – This may be displayed after pressing the “F” key 3 times with the system turned ON

Chiller Control Panel – Press FUNCTION Key
- Security code set



“CODE” indicates that the system has been locked to prevent unintended changes –
Press and Hold the “SUN” key until the number 64 is displayed

Chiller Control Panel – Press FUNCTION Key
- Security code set



“CODE” indicates that the system has been locked to prevent unintended changes –
If you hold the button too long and the numbers go beyond 64 – Press the
“SNOWFLAKE” key until the number 64 is displayed

Chiller Control Panel – Press FUNCTION Key



Once you have the number 64 displayed Press the “F” key to display the mode of operation that the system is in

Chiller Control Panel – Press FUNCTION Key



“F” with numbers behind indicates the mode of operation that the system is in – To change out of A/C mode Press the SUN key 1 time to change into heat mode

Chiller Control Panel – Press FUNCTION Key



“F” with numbers behind indicates the mode of operation that the system is in – To change out of Heat mode Press the SNOWFLAKE key 1 time to change into A/C mode

Chiller Control Panel – Press FUNCTION Key



After changing modes press the “F” key 1 time to display “U” with numbers behind, this allows the system to save the parameter change (“U” indicates system voltage)

Chiller Control Panel – Press FUNCTION Key



Once the parameter change takes place wait until the display shows “NENO” this indicates that the system change is complete – DO NOT PRESS ANY OTHER BUTTONS UNTIL “NENO” IS DISPLAYED

Chiller Control Panel – System ON Interior Temperature Displayed



The interior temperature will be displayed once the parameters have been changed and set into memory, the system will now function as designed using the new mode settings