

Category: Heater

Document Number: PI127BC

Date: 2/24/2016 Rev: 08/2018







Description: **SmarTemp Control
fx Relay Connection**




WARNING: Cancer and Reproductive Harm
www.P65Warnings.ca.gov

Overview

Thank you for choosing Webasto as your source for all your heating needs. This document was created to help guide you through the installation of your SmarTemp relay connection to the heater.

| | | |
|---|---|---|
| <p>① 12V 40AMP MINI-ISO AUTOMOTIVE RELAY <i>QTY:1</i></p>  | <p>③ ATO FUSE 5A TAN 32V FAST ACTING 0.25 TAB <i>QTY: 2</i></p>  | <p>⑤ QUICK DISCONNECT FEMALE TERMINAL NYLON INSULATED 16-14 GA .25 X .032 TAB (BLUE) <i>QTY:4</i></p>  |
| <p>② ATO FUSE HOLDER 18-14 GA SELF STRIP 20A 32V MAX <i>QTY:3</i></p>  | <p>④ ATO FUSE 20A YELLOW 32V FAST ACTING 0.25 TAB <i>QTY: 1</i></p>  | <p>⑥ QUICK DISCONNECT FEMALE TERMINAL NYLON INSULATED 12-10 GA .25 X .032 TAB (YELLOW) <i>QTY:2</i></p>  |

The remainder of this document contains instructions that outline the recommended wiring for connection to a Webasto heater.

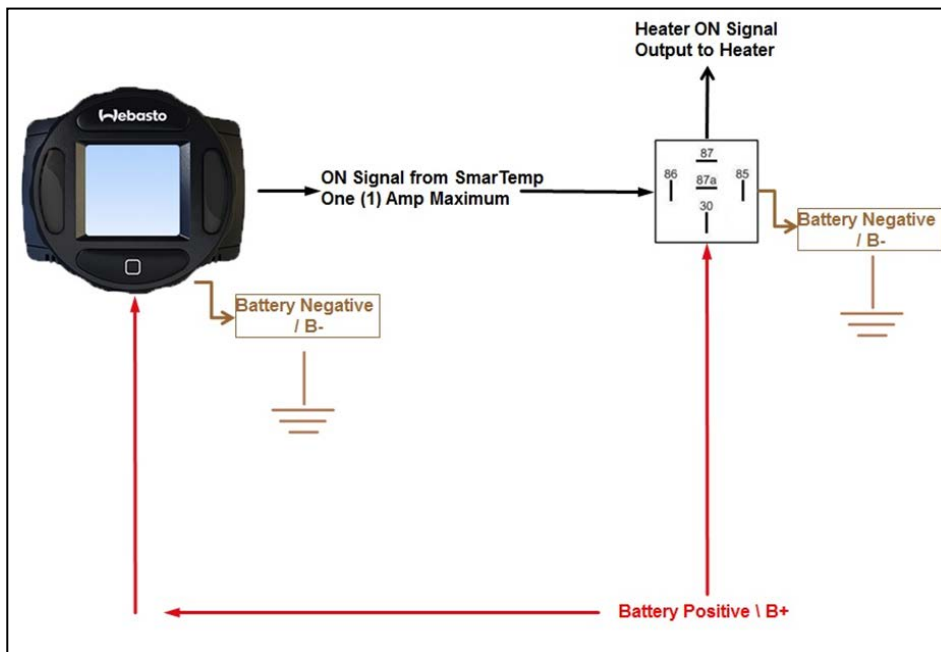

If you have any additional questions please contact our technical support team at (800) 860-7866 or via email at: info-us@webasto.com.