


# ***E-Z Power Tonno***

## **Special Installation Instructions**

### **FOR 2004 FORD F-150 ONLY**

The 2004 Ford F-150 has a uniquely design truck bed. Due to this unique design, different clamps and additional foam must be used for this installation. See the figure below for details.

<b>Part Name</b>	<b>Part Number</b>	<b>Quantity</b>
Foam Roll	S8504-TN-9053A-A	1 62 ¼"
Short Clamp	S8504-TN-8014A-A	2

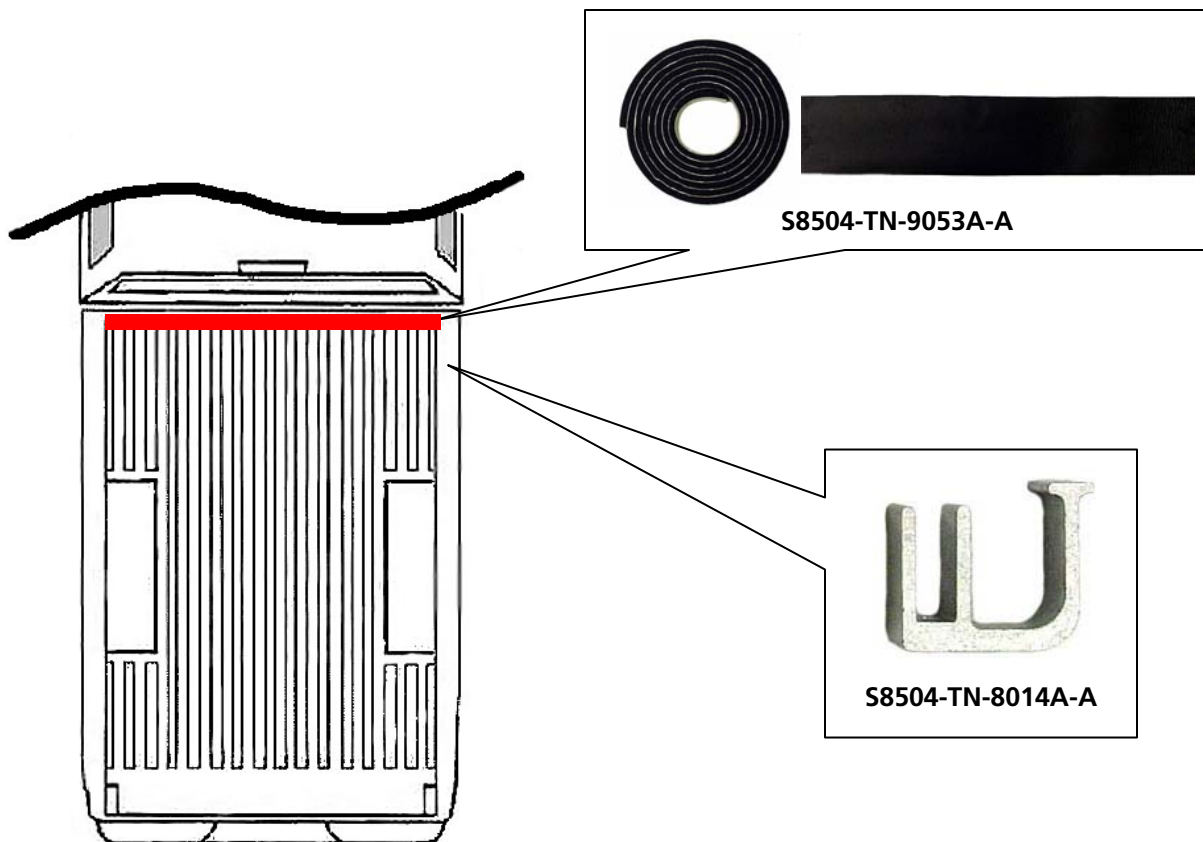

1. The thick line above indicates the install location of the included foam. It is necessary to use two layers of foam to create an equal bed rail surface. Simply apply one layer of foam on top of the other to complete this step.
2. Begin installing clamps from rear of bed towards front with a minimum clearance of 12" from tailgate. Ensure the two supplied clamps P/N S8504-TN-8014A-A are used as the front retaining clamps.